

## ASSEMBLING INSTRUCTION


### NUMBER PLATE

YTM9400-24


### LEGEND

- |  |  |  |
|--|--|--|
| <p>1. ORIGINAL SCREW<br/>VITE ORIGINALE<br/>TORNILLO ORIGINAL<br/>ORIGINALSCHRAUBE<br/>VIS D'ORIGINE</p> <p>2. NEOPRENE 1 X 3<br/>NEOPRENE 1 X 3<br/>NEOPRENO 1 X 3<br/>NEOPREN 1 X 3<br/>NEOPRENE 1 X 3</p> <p>3. NUMBER PLATE<br/>TABELLA PORTANUMERO<br/>SOPORTE PORTANUMERO<br/>NUMMERTAFEL<br/>SUPPORT NUMERO</p> | <p>4. SPECIFIC BRACKET<br/>STAFFA SPECIFICA<br/>SOPORTE ESPECIFICO<br/>SPEZIFISCHE KLAMMER<br/>SUPPORT SPECIFIQUE</p> <p>5. COUNTERSUNK ALLEN M8X16<br/>VITE A TESTA SVASATA M8X16<br/>TORNILLO AVELLANADO M8X16<br/>SENKKOPFSCHRAUBE M8X16<br/>VIS FRAISEE M8X16</p> <p>6. KNURLED NUT Ø8<br/>DADO ZIGRINATO Ø8<br/>TUERCA MOLETEADA Ø8<br/>RANDELMUTTER Ø8<br/>ECROU MOLETÉ Ø8</p> | <p>7. NEOPRENE 1 X 1<br/>NEOPRENE 1 X 1<br/>NEOPRENO 1 X 1<br/>NEOPREN 1 X 1<br/>NEOPRENE 1 X 1</p> <p>8. STICKER<br/>ADESIVO<br/>ADHESIVO<br/>KLEBSTOFF<br/>ADHESIF</p> |
|--|--|--|

WWW.BARRACUDAMOTO.COM

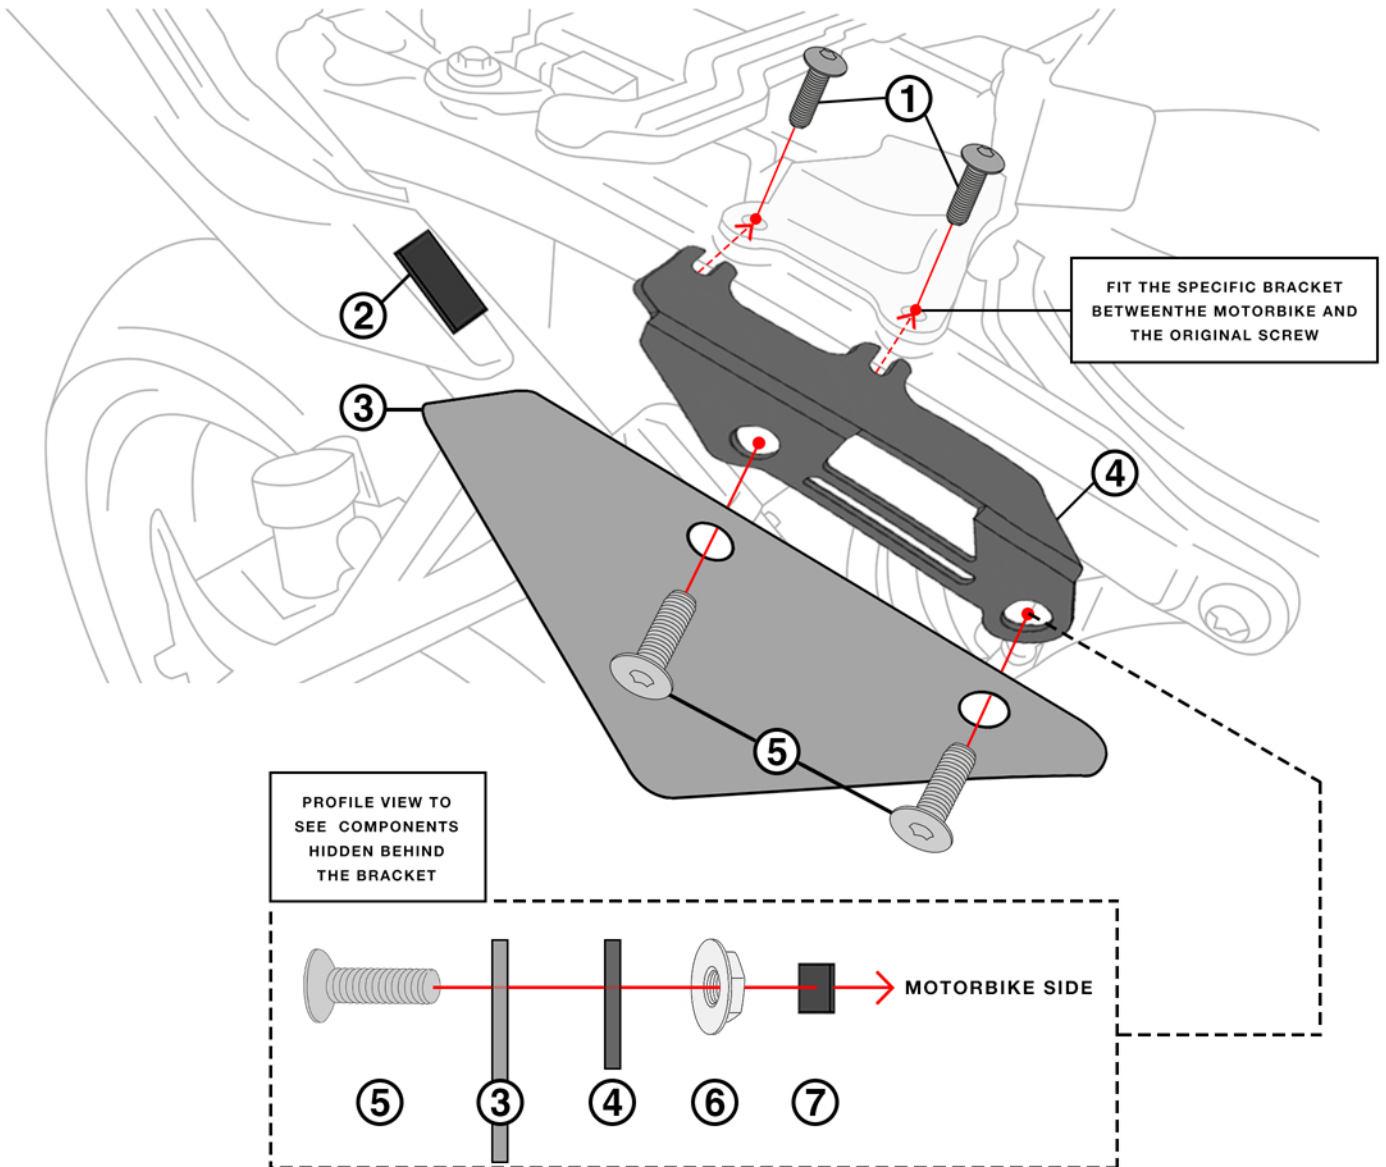

PROFILE VIEW TO SEE COMPONENTS HIDDEN BEHIND THE BRACKET

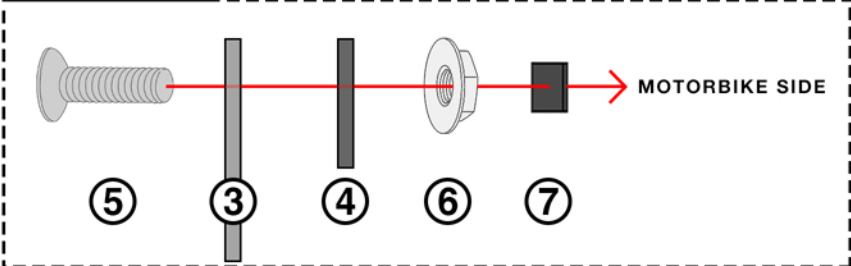

**EN:** ATTACH THE STICKER AFTER TIGHTENING THE BRACKET SCREWS

**IT:** ATTACCARE L'ADESIVO DOPO AVER STRETTO LE BRUGOLE DELLA STAFFA

**ES:** APLICAR EL ADHESIVO DESPUÉS DE APRETAR LOS TORNILLOS DEL SOPORTE

**DE:** TRAGEN SIE DEN KLEBER NACH DEM ANZIEHEN DER BEFESTIGUNGSSCHRAUBEN AUF

**FR:** APPLIQUER L'ADHÉSIF APRÈS AVOIR SERRÉ LES VIS DU SUPPORT

**8**

**APPLYING YOUR DECAL**

|  |   |  |  |
|--|---|--|--|
| 1. Clean   | 2. Align  | 3. Apply                                       | 4. Heat  |
|  |   |  |  |
| <small>Remove any dirt or grease from the surface.</small> | <small>Align the decal with the mounting holes.</small> | <small>Apply the decal to the surface.</small> | <small>Heat the decal with a heat gun or hair dryer.</small> |

**BARRACUDA**  
Cod: HX7400-21  
Descr: SIDE STICKER